


>> Premium Line – HIPP Precision Mechanics Borescope



>> *The industrial endoscope
for the precision mechanics*

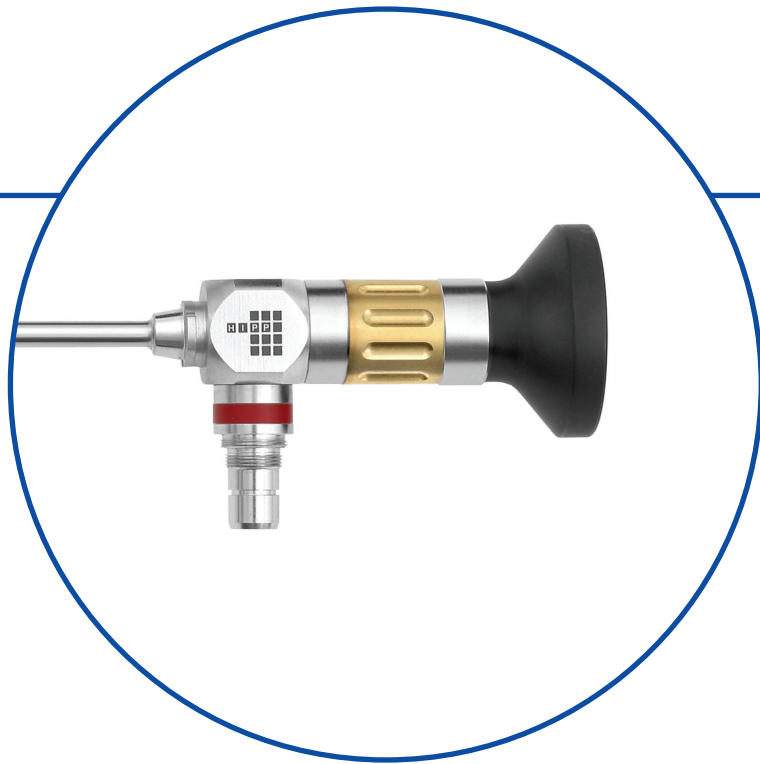

>> Premium Line – HIPP Precision Mechanics Borescope

Product profile:

- rigid borescope with **small outer diameter**
- available versions: with **wide field of view of 70°** or with **replaceable mirror tubes (70°, 90° and 110°)**, with or without **focussing**
- different directions of view and working lengths available
- made of stainless steel – „made in Germany“

User-friendliness along with the maximal scope of operation:

- extra wide **field of view 70°** (optional)
- optimal image quality thanks to **focussing** (optional)
- mirror tubes **rotating at 360°**
- **4 different directions of view** in just one endoscope (optional)
- depth of field of 3 - 40 mm (without focussing)
- the constant use of **sapphire glass** increases the application spectrum and **extends durability**
- applicable under extreme conditions in liquids and temperatures from -10°C up to +100°C
- fulfils all demands of the digital picture processing due to a high-resolution optical system
- the highest compatibility assured by DIN eyepiece and ACMI connection
- maintenance- and repair friendly

Extras of the Premium Line at one glance:



Areas of application:

This product line has been developed to meet the requirements of the digital picture processing. With an outer diameter of 2,8 mm this borescope can be used very well in the precision mechanics and in the electronics. Therefore, it is the perfect choice especially in the quality tests, for example, in machining plants in order to examine and document material defaults and surface condition.

Thanks to the unrivalled combination of extras in one product the area of application is increased. Moreover, the optional digital picture processing facilitates the documentation and archiving of examination results enormously.

Scope of delivery:

HIPP Precision Mechanics Borescope + solid carrying case

Optional accessories:

mirror tubes with 70°, 90° and 110° direction of view

Service:

The support service for our customers goes without saying also after the purchase. As Europe's leading, manufacturer independent repair service for rigid endoscopes, we offer you service-complete solutions for your whole stock of **rigid** industrial endoscopes. **The advantages are obvious:** unrivalled repair times (on average about 10 working days), one key-, manufacturer independent contact as well as a fixed price guarantee.